





“Error ID” is shown on the LSM display.

"ERR-ID" is displayed on the display if the ID unit is not installed or a wrong ID unit is installed.

LSM-5000 Series

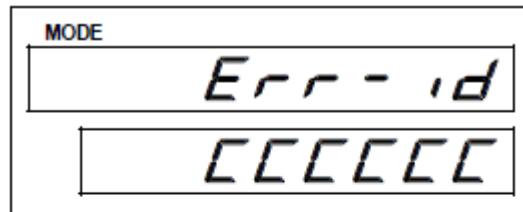

LSM-6000 Series

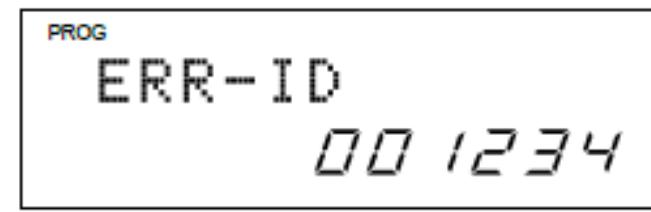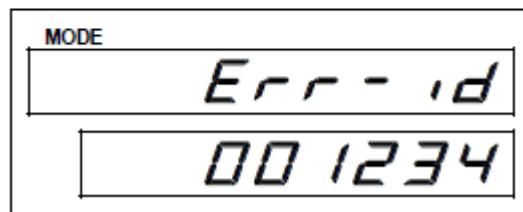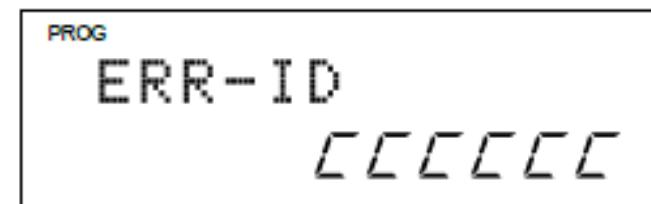

*If the ID unit is not installed, "CCCCCC" is displayed in the lower line. When a wrong ID unit is installed, the serial number of the installed ID unit is displayed in the lower line.

Check that the ID unit is properly installed.

An "ID unit" is included with the measuring unit of the LSM you purchased.

This is a correction ROM to correct the optical characteristics of the measuring unit. Accuracy is not guaranteed unless it is installed.

The serial numbers of the measuring unit and the ID unit match.

(The locations of the serial numbers are marked by the red circles in the photo below. Please make sure they match.)



Measuring unit



ID unit

Attach the ID unit to the slot in the display unit.

【The attachment position differs depending on the model.】

ID unit attachment slot: The slot is located on the back of the display unit for the LSM-6000 Series, while it is located on the front for the LSM-5000 Series. (Location of the red circle in the photo)



LSM-6000 Series without ID unit installed



LSM-5000 Series with ID unit installed

If the error persists even after checking that the correct ID unit is installed, assume that the system has a malfunction.